## **Quick Reference Guide**

| General Information             | 1  |  |
|---------------------------------|----|--|
| Fuel System                     | 2  |  |
| Cooling System                  | 3  |  |
| Engine Top End                  | 4  |  |
| Clutch                          | 5  |  |
| Engine Lubrication System       | 6  |  |
| Engine Removal/Installation     | 7  |  |
| Crankshaft/Transmission         | 8  |  |
| Wheels/Tires                    | 9  |  |
| Final Drive                     | 10 |  |
| Brakes                          | 11 |  |
| Suspension                      | 12 |  |
| Steering                        | 13 |  |
| Frame                           | 14 |  |
| Electrical System               | 15 |  |
| Appendix                        | 16 |  |
| Supplement - 1988 ∼ 1989 Models | 17 |  |
| Supplement - 1990 ~ 1997 Models | 18 |  |
| Supplement - 2000 ~ 2002 Models | 19 |  |
| Supplement - 2003 ~ 2004 Models | 20 |  |

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.