




- Remove the oil hose cover by removing two fasteners.

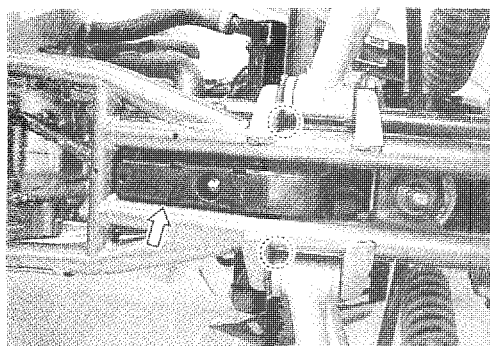

- Disconnect the oil hoses ② and breather hose ③.

**CAUTION**

Do not reused the removed O-ring in order to prevent leakage of oil.

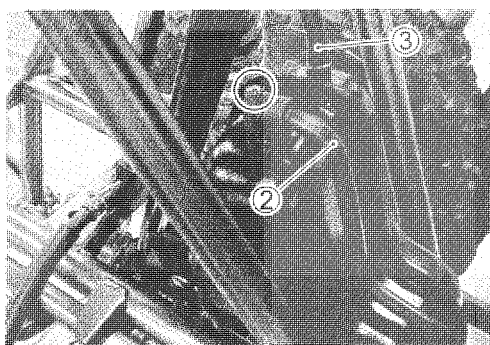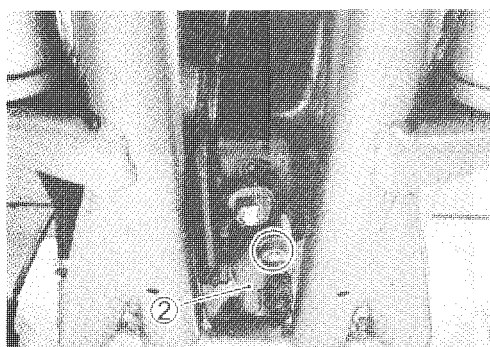

- Remove the oil tank ④.

