

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

The CIVIC includes a driver's side airbag (US Cars, Canada: Optional on EXV), located in the steering wheel hub, as part of the Supplemental Restraint System (SRS). Information necessary to safely service the SRS is included in this Service Manual. Items marked * in each section's table of contents include, or are located near SRS components. Servicing, disassembling or replacing these items will require special cautions and tools, and should therefore be done only by an authorized Honda dealer.

⚠ WARNING

- To avoid rendering the SRS inoperative, which can lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized Honda dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the airbag.
- All SRS electrical wiring harnesses are covered with yellow outer insulation and related components are located in the steering column, dash, center console, and dashboard lower panel. Do not use electrical test equipment on these circuits.