

INDEX

SECTION I — INTRODUCTION	1
SECTION II — ENGINE SPECIFICATIONS ...	2
SECTION III — TORQUE SPECIFICATIONS .	3

SECTION VII — FUEL SYSTEM

Paragraph Number	Title	Page Number
1	Fuel Tank	21
2	Fuel Shut-Off Valve.....	22

SECTION IV — TUNE-UP

Paragraph Number	Title	Page Number
1	Engine Covers	5
2	Electrical	6
3	Carburetor	8

SECTION VIII — GEAR HOUSING

Paragraph Number	Title	Page Number
1	Gear Housing - Complete..	23
2	Bearing Cage Retainer	24
2	Bearing Cage Seal "O" Ring	24
3	Propeller Shaft Bearing Cage	25
3	Propeller Shaft Seal.....	25
4	Shift Pin	26
5	Clutch	26
5	Clutch Spring	26
5	Propeller Shaft.....	26
6	Bevel Pinion Gear	27
7	Bevel Gear	28
8	Driveshaft	28
8	Water Pump Plate	28
8	Water Pump Impeller	28
8	Water Pump Impeller Drive Pin	28
9	Water Pump Body	29
9	Water Line Seal.....	29
9	Shift Cam	29
9	Shift Rod	29
9	Shift Rod Seal	29
10	Driveshaft Seal	30
10	Seal "O" Ring Water Pump	30
11	Gear Housing	31
12	Pressure Testing Gear Housing	31

SECTION V — CARBURETOR

Paragraph Number	Title	Page Number
1	Carburetor Complete	11
2	Throttle Shutter.....	11
2	Throttle Shaft	11
3	Choke Shutter	12
3	Choke Shaft	12
4	Idle Adjustment Screw	13
5	Fuel Bowl	13
5	Fuel Bowl Gasket	13
5	High Speed Needle Assembly	13
6	Main Nozzle	14
7	Float	14
7	Float Pin	14
7	Inlet Needle Seat and Gasket	14

SECTION VI — MAGNETO

Paragraph Number	Title	Page Number
1	Flywheel.....	17
2	Lapping Flywheel	17
3	Stator Plate - Complete....	17
4	Flywheel Key	17
5	Magneto Cam	18
6	Breaker Point	18
7	Condenser	18
8	Coil	19
9	Lighting Coil	20

SECTION IX — MANUAL STARTER

Paragraph Number	Title	Page Number
1	Starter Complete	33
2	Friction Shoe Assembly ...	33
3	Rotor	33
3	Starter Rope	33
4	Starter Spring	34
4	Starter Cover	34