



General information

How to use this manual	1-1
Manual format.....	1-1
Symbol.....	1-2
Abbreviation.....	1-3
Sealant and locking agent table	1-3
Safety while working	1-4
Fire prevention.....	1-4
Ventilation.....	1-4
Self-protection	1-4
Part, lubricant, and sealant.....	1-4
Good working practice.....	1-5
Disassembly and assembly	1-5
Identification	1-6
Model.....	1-6
Serial number	1-6
Special service tool	1-7
Propeller selection	1-12
Propeller size.....	1-12
Selection.....	1-12
Predelivery check	1-12
Checking the outboard motor mounting height.....	1-13
Removing the intake silencer protective covering	1-13
Checking the fuel system	1-13
Checking the engine oil level.....	1-13
Checking the gear oil level	1-14
Checking the battery (electric starter model).....	1-14
Setting the remote control cable (remote control model).....	1-14
Checking the gear shift and throttle operation.....	1-15
Checking the steering system	1-16
Checking the tilt system (manual tilt model)	1-17
Checking the power tilt system (power tilt model)	1-17
Checking the engine start switch and engine stop lanyard switch	1-18
Checking the cooling water pilot hole	1-18
Test run	1-19
Break-in	1-19
After test run	1-19
Precaution when transporting or storing the outboard motor	1-19