








## Section 02 LUBRICATION AND MAINTENANCE

### Subsection 01 (PERIODIC MAINTENANCE CHART)

# PERIODIC MAINTENANCE CHART

SYSTEM	PART/TASK	10-HOUR OR 500 km (300 mi) INSPECTION (to be performed by dealer)	WEEKLY OR EVERY 240 km (150 mi)	MONTHLY OR EVERY 800 km (500 mi)	ONCE A YEAR OR EVERY 3200 km (2000 mi)	STORAGE (to be performed by dealer)	PRE-SEASON PREPARATION (to be performed by dealer)	REFER TO
	Rewind Starter Lubrication and Rope Condition					✓	✓	Subsection 04-07
	Engine Head Nuts	✓			✓	✓		Appropriate section: See Top End
	Engine Mount Nuts	✓			✓	✓		Appropriate section: See ENGINE REMOVAL
	Exhaust System	✓		✓		✓		Appropriate section: See ENGINE REMOVAL
	Engine Lubrication					✓	✓	This section no. 1
	Cooling System Condition	✓			✓		✓	Subsection 04-06
	Coolant Replacement					✓		Subsection 04-06
	Condition of Seals					✓	✓	Subsection 04-02
	Injection Oil Filter Condition			✓				Subsection 04-05
	Injection Oil Filter Replacement					✓		Subsection 04-05
	Oil Injection Pump Adjustment	✓			✓		✓	Subsection 04-05
	Fuel Stabilizer					✓		This section no. 2
	Fuel Filter Replacement						✓	This section no. 3
	Fuel Lines and Connections	✓				✓	✓	Subsection 04-09
	Carburetor Adjustment	✓			✓		✓	Subsection 04-08
	Throttle Cable Inspection	✓			✓	✓	✓	Subsection 04-09
	Air Filter Cleaning			✓			✓	This section no. 4
	Drive Belt Condition	✓	✓				✓	This section no. 5
	Condition of Drive and Driven Pulleys	✓		✓		✓		Subsections 05-03 and 05-04
	Cleaning of Drive and Driven Pulleys						✓	Subsections 05-03 and 05-04
	Retorquing of Drive Pulley Screw	✓						Subsection 05-03
	Driven Pulley Preload	✓			✓	✓		Subsection 05-04
	Brake Fluid Level	✓	✓				✓	Subsection 05-06
	Brake Fluid Change (once a year)					✓		Subsection 05-06
	Brake Condition	✓	✓			✓	✓	Subsection 05-06
	Brake Adjustment			✓		✓		Subsection 05-06
	Drive Chain Tension	✓		✓		✓		Subsection 05-07
	Countershaft Lubrication**	✓		✓		✓		Subsection 05-06
	Chaincase Oil Level	✓		✓			✓	Subsection 05-07
	Chaincase Oil Change	✓				✓		Subsection 05-07
	Lubrication of Drive Axle Bearing**	✓		✓		✓		Subsection 07-03