
TABLE OF CONTENTS

| | |
|--|-------------|
| SAFETY NOTICE | VIII |
| INTRODUCTION | IX |
| VEHICLE IDENTIFICATION NUMBER..... | IX |
| VEHICLE IDENTIFICATION NUMBER LOCATION | IX |
| IDENTIFICATION NUMBER MEANING..... | IX |
| ENGINE SERIAL NUMBER | X |
| ENGINE SERIAL NUMBER LOCATION..... | X |
| LIST OF ABBREVIATIONS USED IN THIS MANUAL..... | X |
| ARRANGEMENT OF THIS MANUAL | XI |
| GENERAL INFORMATION..... | XII |
| ILLUSTRATIONS AND PROCEDURES | XII |
| SELF-LOCKING APPLICATION PROCEDURE..... | XII |
| LOCTITE® APPLICATION PROCEDURE | XII |
| THREADLOCKER | XII |
| STRIPPED THREAD REPAIR | XIV |
| GASKET COMPOUND | XIV |
| MOUNTING ON SHAFT | XV |
| CASE-IN COMPONENTS | XV |
| TIGHTENING TORQUE | XVI |
| 01 SERVICE TOOLS AND SERVICE PRODUCTS | |
| 01 – SERVICE TOOLS | 1 |
| ENGINE — MANDATORY TOOLS | 1 |
| ENGINE — RECOMMENDED TOOLS..... | 4 |
| TRANSMISSION — MANDATORY TOOLS | 9 |
| TRANSMISSION — RECOMMENDED TOOLS..... | 10 |
| SUSPENSION — MANDATORY TOOLS | 14 |
| SUSPENSION — RECOMMENDED TOOLS..... | 15 |
| VEHICLE — RECOMMENDED TOOLS..... | 18 |
| 02 – SERVICE PRODUCTS | 21 |
| 02 MAINTENANCE | |
| 01 – MAINTENANCE CHART | 29 |
| 02 – STORAGE | 33 |
| GENERAL | 33 |
| FUEL STABILIZER | 33 |
| COOLING SYSTEM | 33 |
| ENGINE OIL CHANGE AND FILTER | 33 |
| ENGINE LUBRICATION | 33 |
| ENGINE COMPARTMENT | 34 |
| PULLEY PROTECTION..... | 34 |
| BATTERY..... | 34 |
| VEHICLE CLEANING..... | 34 |
| RAGS IN AIR INTAKE AND EXHAUST SYSTEM | 35 |
| VEHICLE PROTECTION..... | 35 |
| 03 – PRESEASON PREPARATION | 37 |
| AIR FILTER CLEANING | 37 |
| RAGS IN AIR INTAKE AND EXHAUST SYSTEM | 37 |
| CLEANING OF DRIVE AND DRIVEN PULLEYS..... | 37 |
| CLEANING OF BRAKE DISKS..... | 37 |
| DRIVE BELT AND FINAL DRIVE BELT CONDITION | 37 |