
TABLE OF CONTENTS

SAFETY NOTICE	X
INTRODUCTION	XI
GENERAL	XI
HOW TO IDENTIFY YOUR VEHICLE	XII
SNOWMOBILE LIFTING	XII
ENGINE EMISSIONS INFORMATION	XIII
TIGHTENING TORQUE	XIV
SELF-LOCKING FASTENERS PROCEDURE	XV
LOCTITE APPLICATION PROCEDURE	XV
MANUAL INFORMATION	XVIII
01 MAINTENANCE	
01 – MAINTENANCE CHART	1
02 – STORAGE PROCEDURE	3
GENERAL	3
PROCEDURES	3
ENGINE MANAGEMENT SYSTEM	3
FUEL SYSTEM	3
ENGINE	3
ELECTRICAL SYSTEM	5
DRIVE/BRAKE SYSTEM	5
CHASSIS	5
VEHICLE	6
03 – PRESEASON PREPARATION	7
GENERAL	7
PROCEDURES	7
ENGINE	7
FUEL SYSTEM	7
ELECTRICAL SYSTEM	8
DRIVE/BRAKE SYSTEM	8
02 ENGINE	
01 – ENGINE REMOVAL AND INSTALLATION	9
GENERAL	12
PROCEDURES	12
ENGINE	12
ENGINE STOPPER	23
ENGINE SUPPORT	24
ENGINE RUBBER MOUNT	25
02 – ENGINE LEAK TEST	27
TROUBLESHOOTING	28
PROCEDURES	29
ENGINE	29
PUMP SHAFT OIL GEAR RESERVOIR	30
03 – ENGINE MEASUREMENT	33
PROCEDURES	33
CYLINDER HEAD WARPAGE	33
CYLINDER TAPER	33
CYLINDER OUT OF ROUND	33
CYLINDER/PISTON CLEARANCE	34
RING/PISTON GROOVE CLEARANCE	35
RING END GAP	36
CRANKSHAFT DEFLECTION	36
CONNECTING ROD BIG END AXIAL PLAY	37