

## FORWARD

This KitchenAid Job Aid, "Failure Codes And Wiring Diagrams For Whirlpool and KitchenAid Slide-In & Freestanding Gas & Electric Ranges," (Part No. 4317368), provides the technician with information on diagnosing and troubleshooting slide-in and freestanding gas & electric ranges. It is to be used as a training Job Aid. For specific information on the model being serviced, refer to the "Use and Care Guide," or "Tech Sheet" provided with the unit.

The Wiring Diagrams used in this Job Aid are typical and should be used for training purposes only. Always use the Wiring Diagram supplied with the product when servicing the unit.

## GOALS AND OBJECTIVES

The goal of this Job Aid is to provide detailed information that will enable the service technician to properly diagnose malfunctions and repair Whirlpool and KitchenAid ranges.

The objectives of this Job Aid are to:

- Successfully troubleshoot and diagnose malfunctions.
- Offer Electronic Oven Control information.

WHIRLPOOL CORPORATION assumes no responsibility for any repairs made on our products by anyone other than Authorized Service Technicians.

Copyright © 2004, Whirlpool Corporation, Benton Harbor, MI 49022