


GEAR OIL

Change initially after 20 hours (1 month) and every 100 hours (6 months).

1. Place outboard motor upright on a level surface.
2. Place a container under the lower unit.
3. Remove lower gear oil drain plug first, then remove gear oil level plug and drain gear oil.

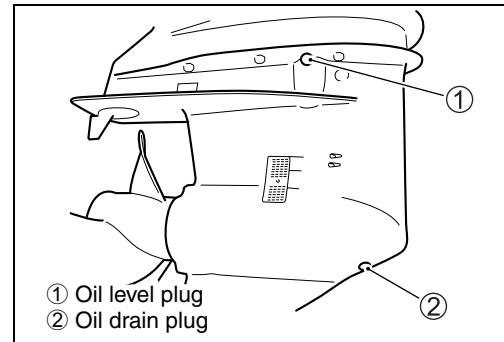


4. Fill with recommended gear oil through oil drain hole until oil just starts to flow out from oil level hole.

Gear oil amount: 1 100 ml (37.2/38.7 US/Imp. oz)

Recommended oil:

**SUZUKI OUTBOARD MOTOR GEAR OIL or
SAE #90 HYPOID GEAR OIL**

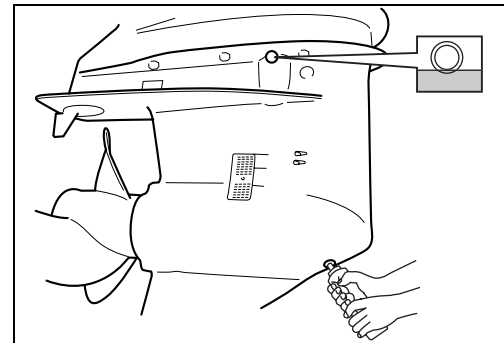

5. Install oil level plug before removing oil filler tube from drain hole.
6. Install oil drain plug.

CAUTION

Do not re-use gaskets once removed. Always use a new gasket.

NOTE:

To avoid a possible low gear oil level, recheck gear oil level 10 minutes after doing procedure in step 6. If oil level is low, add additional gear oil until level is correct.