



Remove the brushes from the brush holder.

Measure the brush length.

SERVICE LIMIT 8.5 mm 10.33 in)

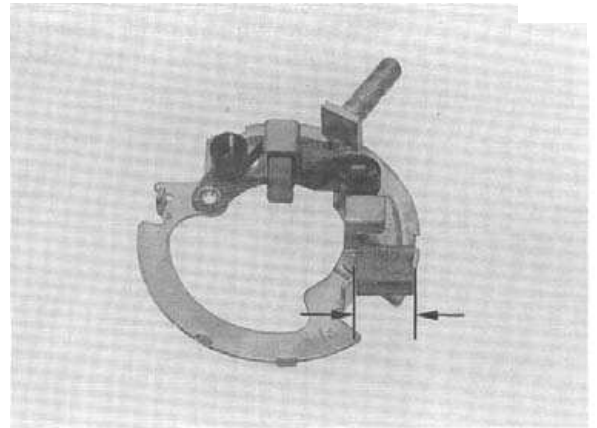

ASSEMBLY

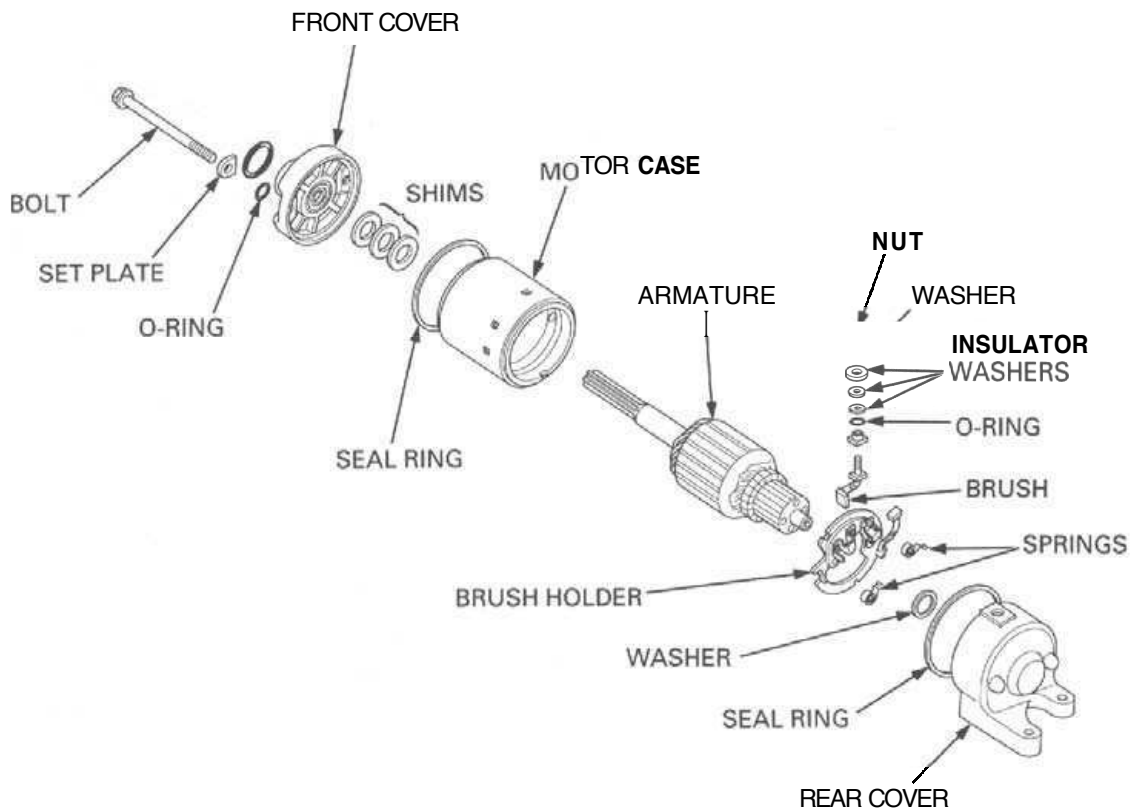

Install the brushes into the brush holder.

